

ONE YEAR GUARANTEE

YOUR NEW CHEETAH PRODUCT HAS BEEN TESTED AND INSPECTED BEFORE LEAVING THE FACTORY. IT IS GUARANTEED AGAINST DEFECTIVE MATERIALS OR WORKMANSHIP FOR A PERIOD OF ONE YEAR FROM THE ORIGINAL PURCHASE DATE PROVIDED IT HAS BEEN PROPERLY OPERATED AND MAINTAINED.

DURING THE ABOVE GUARANTEE PERIOD, ANY DEFECTS IN PARTS OR WORKMANSHIP WILL BE REPAIRED BY CHEETAH MARKETING LTD AT NO CHARGE, EXCEPT FOR A HANDLING AND RETURN TRANSPORTATION CHARGE OF £1.50 WHICH MUST BE ENCLOSED WHEN RETURNING YOUR UNIT FOR SERVICE. MAKE REMITTANCE BY CHEQUE OR POSTAL ORDER PAYABLE TO CHEETAH MARKETING LTD. DO NOT SEND CASH OR STAMPS. RETURN YOUR UNIT POSTPAID TO CHEETAH MARKETING LTD, SERVICE DEPARTMENT, 1 WILLOWBROOK SCIENCE PARK, CRICKHOWELL ROAD CARDIFF. (C.O.D. PACKAGES WILL NOT BE ACCEPTED).

PLEASE PACK YOUR UNIT CAREFULLY WITH PROPER WRAPPING TO AVOID BREAKAGE AS NO LIABILITY CAN BE ACCEPTED FOR DAMAGE OR LOSS IN TRANSIT. TO EXPEDITE PROCESSING, PLEASE ENSURE NATURE OF FAILURE IS INDICATED.

AT ITS OPTION CHEETAH MARKETING LTD MAY ELECT TO REPLACE THE ENTIRE UNIT, RATHER THAN REPAIR IT.

THIS GUARANTEE DOES NOT COVER REPLACEMENTS OF CASES OR SCREWS. THIS GUARANTEE IS VOID IF THE DEFECT IS DUE TO USE OF THE PRODUCT FOR OTHER THAN THE PURPOSE IT IS DESIGNED FOR, TO ACCIDENTAL DAMAGE (WHETHER IN TRANSIT OR OTHERWISE), MISUSE, NEGLIGENCE OR REPAIR OTHER THAN BY THE MANUFACTURER.

CHEETAH MARKETING LTD DISCLAIM ANY LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

THIS GUARANTEE BECOMES EFFECTIVE ONLY IF A LETTER IS COMPLETED AND MAILED WITHIN 10 DAYS OF PURCHASE GIVING THE FOLLOWING DETAILS: - WHEN AND WHERE PURCHASED, WITH COPY OF RECEIPT. THESE STATEMENTS IN NO WAY PREJUDICE THE STATUTORY RIGHTS OF THE PURCHASER.

THIS JOYSTICK IS ONLY ONE PRODUCT IN THE BEST RANGE OF COMPUTER PERIPHERALS AVAILABLE TODAY. CHEETAH REMAIN THE TOP COMPANY IN THIS FIELD PRODUCING WHAT YOU THE CUSTOMER WANTS – AT THE BEST PRICES AND AT THE BEST QUALITY IN THE INDUSTRY.

WE INVITE YOU TO BECOME A MEMBER OF THE EXCLUSIVE CHEETAH USER CLUB. AS A PURCHASER OF OUR PRODUCTS YOU WILL BE ENTITLED TO FREE MEMBERSHIP, WHICH WILL ENSURE THAT YOU RECEIVE REGULAR NEWS BULLETINS, SPECIAL OFFERS AND VERY SIZABLE DISCOUNTS ON CHEETAH'S RANGE WHEN BUYING DIRECT. ALL YOU HAVE TO DO IS WRITE AND ASK FOR AN APPLICATION FORM. WE LOOK FORWARD TO HEARING FROM YOU.

INSTRUCTIONS FOR USE

YOUR JOYSTICK COMES COMPLETE WITH THE SPECIAL CHEETAH SELECTOR CONNECTOR. THIS COMPRISES OF A TWIN LEAD FOR CONNECTION TO STANDARD COMPUTER GAME JOYSTICK SOCKETS LIKE SINCLAIR 16K, 48K, 128K, COMMODORE 64, AMSTRAD 464, 664, 6128, ATARI HOME COMPUTERS ETC. AND ALSO THE ZX SPECTRUM +2.

THE CONNECTORS ARE COLOURED BLACK AND GREY. WHEN CONNECTING TO THE STANDARD RANGE OF MACHINES USE THE BLACK CONNECTOR AND WHEN USING THE +2 COMPUTER USE THE GREY CONNECTOR. SIMPLY PLUG THE RELEVANT CONNECTOR INTO THE JOYSTICK SOCKET ON YOUR MACHINE. IF YOU WISH TO USE THE 'KEMPSTON' OPTION, THEN CONNECT THE BLACK PLUG INTO YOUR JOYSTICK INTERFACE. IT IS ADVISABLE TO READ YOUR MACHINE MANUAL FIRST TO ENSURE THE CORRECT METHOD. DO NOT PLUG THE WRONG CONNECTOR INTO THE WRONG MACHINE. THIS COULD RESULT IN A CRASH OF THE PRGRAM OR DAMAGE THE MACHINE. ONCE CONNECTED THE JOYSTICK WILL RECOGNISE WHICH MACHINE IS BEING USED AND WILL ALLOW THE NORMAL OPERATION. FOLLOW THE INSTRUCTIONS PROVIDE WITH THE GAME TO DETERMINE DIRECTIONAL AND FIRE CONTROLS. MANY GAMES WILL ALLOW YOU TO USE THE BUILT IN AUTO FIRE FUNCTION. TO USE THIS SIMPLY SLIDE THE AUTO FIRE SWITCH TO THE 'ON' POSITION. THIS WILL SEND A CONSTANT STREAM OF FIRE AT YOUR ENEMY.

AFTER +2 AT THE END OF THE FIRST PARAGRAPH - + 3

AFTER +2 IN THE SECOND PARAGRAPH - + 3

CHEETAH JOYSTICK-AMSTRAD PC COMPATIBILITY INSTRUCTIONS

THE CHEETAH 125 AND MACH 1 SERIES OF JOYSTICKS CAN BE USED WITH THE AMSTRAD PCS AS GAMES CONTROLLERS IF THE FOLLOWING INFORMATION IS IMPLEMENTED: (IT SHOULD BE NOTED THAT ONLY SOFTWARE WRITTEN FOR THIS TYPE OF JOYSTICK WILL FUNCTION CORRECTLY).

LOAD PROGRAM NVR FROM THE DISC SUPPLIED WITH THE MACHINE.

WHEN THE MENU APPEARS ON THE SCREEN-SELECT THE JOYSTOCK FIRE BUTTON OPTION.

CHANGE FIRE BUTTON NO. 1 TO SPACE BAR.

EXIT TO D.O.S.-SAVING THESE CHANGES.

THIS INFORMATION WILL THEN BE PERMANENTLY STORED IN THE COMPUTERS MEMORY.

THEN SIMPLY PLUG THE JOYSTICK INTO THE CORRECT PORT IN THE COMPUTER. (IN THE CASE OF THE VERSIONS OF BOTH JOYSTICKS-THE BLACK PLUG SHOULD BE USED).

ENJOY YOURSELF